6. Temperature controller disassembly (Semi Electronic)
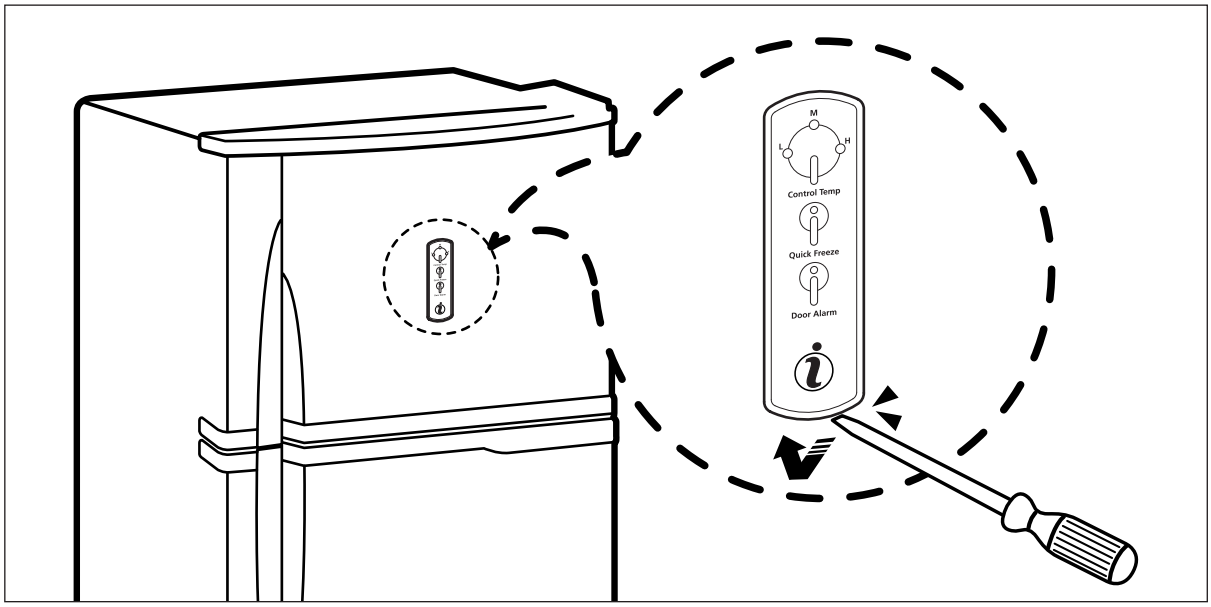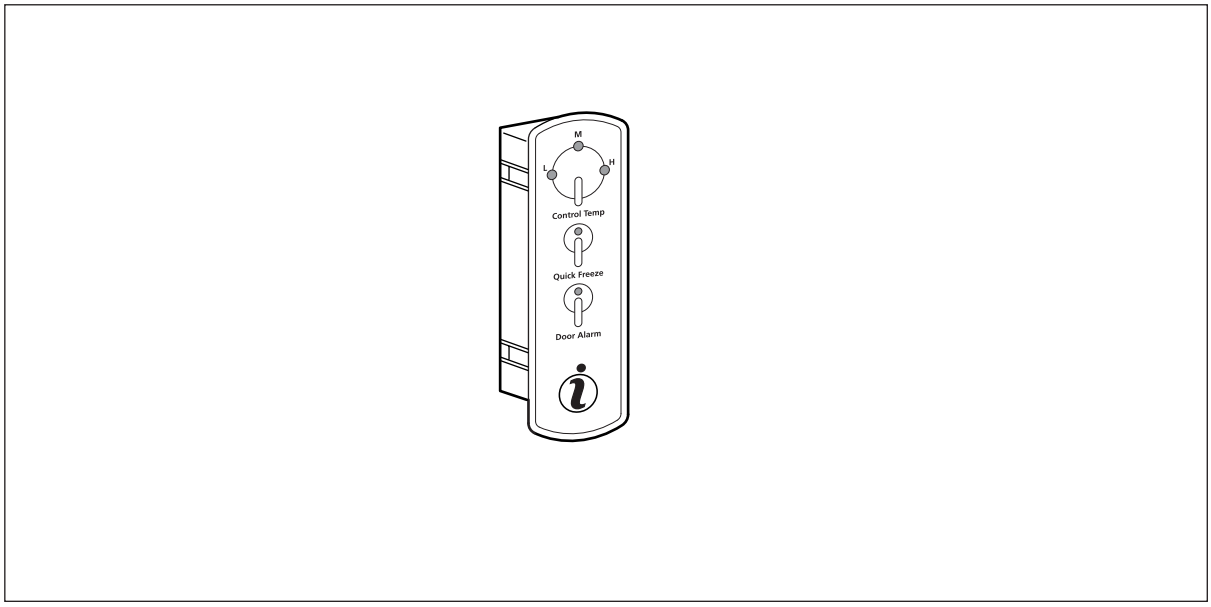
1. Push the latch of control panel assembly with(-) driver and pull out the control panel.